

Installation guide

# Solenoid coil with electronic coil controller

Type EEC

032R9552

032R9552



**Nominal voltage:**  
208 V – 240 V AC 50/60 Hz (-10% – 10%)

**Ambient temperature range:**  
-25 – 55 °C (-13 – 130 °F)

**Power consumption (running):** 4 W

**Enclosure rating:** IP67

**! Note:**  
Coil must only be used together with electronic coil controller.

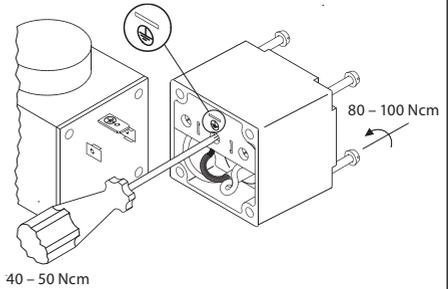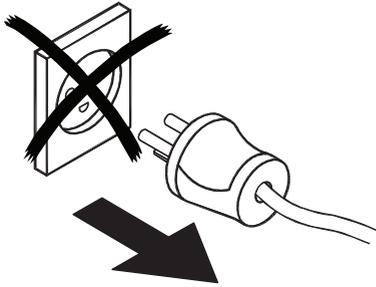

**! WARNING:**  
Always disconnect power from the coil when dismounted from the valve. The coil may be damaged and there is risk of injuries and burns.

**! Note:**  
Ensure tight cable/terminal connection as the electronic is moist sensitive.

